

## SECTION 4

# CARE AND CLEANING

- [1] The Jacobs Ladder machine and rungs can be cleaned with any mild household cleaner.
- [2] Never put any polish or wax on the rungs which will cause rungs to become slippery and unsafe.
- [3] Never get any polish or wax on the black plastic runners at either end of the rungs which will harm machine speed.
- [4] **IMPORTANT: Black plastic runners located underneath the side handles and sides on either side of the rungs must be kept clean. Do not get any oil, grease, polish, etc... on the black plastic runners.**
- [5] Wipe down the display board with a damp cloth.
- [6] Do not use cleaning sprays, large amounts of soap or water, abrasive or sharp objects on the display board.